

The air drives of all Maximator® units are lubricated at the factory with silicone free semi-synthetic grease (Kluber Poly lub GA352P). After 2-3 months of normal (50% duty) operation, the spool seals should be inspected for wear and re-lubricated. Based on this inspection, future maintenance intervals can be planned and further disassembly and lubrication of other moving seals may be necessary.